


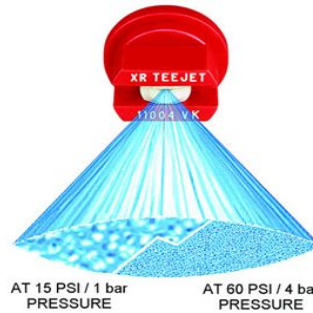

Kapazitentabelle
VisiFlo® Flachstrahldüse

		liter per minuut																		
		2 bar	3 bar	4 bar	5 bar	6 bar	7 bar	8 bar	9 bar	10 bar	11 bar	12 bar	13 bar	14 bar	15 bar	16 bar	17 bar	18 bar	19 bar	20 bar
.01	100	0,32	0,39	0,45	0,50	0,55	0,60	0,64	0,68	0,71	0,75	0,78	0,81	0,84	0,87	0,90	0,93	0,96	0,98	1,01
.015	100	0,48	0,59	0,68	0,76	0,83	0,90	0,96	1,02	1,08	1,13	1,18	1,23	1,27	1,32	1,36	1,40	1,45	1,48	1,52
.02	50	0,65	0,79	0,91	1,02	1,12	1,21	1,29	1,37	1,44	1,51	1,58	1,64	1,71	1,77	1,83	1,88	1,94	1,99	2,04
.03	50	0,96	1,18	1,36	1,52	1,67	1,80	1,93	2,04	2,15	2,26	2,36	2,46	2,55	2,64	2,73	2,81	2,89	2,97	3,05
.04	50	1,29	1,58	1,82	2,04	2,23	2,41	2,58	2,74	2,88	3,03	3,16	3,29	3,41	3,53	3,65	3,76	3,87	3,98	4,08
.05	50	1,61	1,97	2,27	2,54	2,79	3,01	3,22	3,41	3,60	3,77	3,94	4,10	4,26	4,41	4,55	4,69	4,83	4,96	5,09
.06	50	1,94	2,37	2,74	3,06	3,35	3,62	3,87	4,10	4,33	4,54	4,74	4,93	5,12	5,30	5,47	5,64	5,81	5,96	6,12
.08	50	2,58	3,16	3,65	4,08	4,47	4,83	5,16	5,47	5,77	6,05	6,32	6,58	6,83	7,07	7,30	7,52	7,74	7,95	8,16



EMPAS BV
 Kruisboog 43
 3905 TE Veenendaal
 Tel: +31 (0)318-52588