




Capaciteitstabel
VisiFlo® vlakstraalnozzle's

		liter per minuut																		
		2 bar	3 bar	4 bar	5 bar	6 bar	7 bar	8 bar	9 bar	10 bar	11 bar	12 bar	13 bar	14 bar	15 bar	16 bar	17 bar	18 bar	19 bar	20 bar
.01	100	0,32	0,39	0,45	0,50	0,55	0,60	0,64	0,68	0,71	0,75	0,78	0,81	0,84	0,87	0,90	0,93	0,96	0,98	1,01
.015	100	0,48	0,59	0,68	0,76	0,83	0,90	0,96	1,02	1,08	1,13	1,18	1,23	1,27	1,32	1,36	1,40	1,45	1,48	1,52
.02	50	0,65	0,79	0,91	1,02	1,12	1,21	1,29	1,37	1,44	1,51	1,58	1,64	1,71	1,77	1,83	1,88	1,94	1,99	2,04
.03	50	0,96	1,18	1,36	1,52	1,67	1,80	1,93	2,04	2,15	2,26	2,36	2,46	2,55	2,64	2,73	2,81	2,89	2,97	3,05
.04	50	1,29	1,58	1,82	2,04	2,23	2,41	2,58	2,74	2,88	3,03	3,16	3,29	3,41	3,53	3,65	3,76	3,87	3,98	4,08
.05	50	1,61	1,97	2,27	2,54	2,79	3,01	3,22	3,41	3,60	3,77	3,94	4,10	4,26	4,41	4,55	4,69	4,83	4,96	5,09
.06	50	1,94	2,37	2,74	3,06	3,35	3,62	3,87	4,10	4,33	4,54	4,74	4,93	5,12	5,30	5,47	5,64	5,81	5,96	6,12
.08	50	2,58	3,16	3,65	4,08	4,47	4,83	5,16	5,47	5,77	6,05	6,32	6,58	6,83	7,07	7,30	7,52	7,74	7,95	8,16

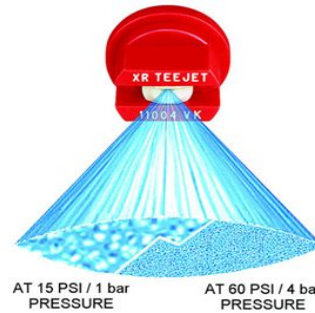

EMPAS Hogedrukspuiten BV
Kruisboog 43
3905 TE Veenendaal
Tel: +31 (0)318-52588